

TABLE Quickstart

Thank you for purchasing a FRIZ Lights product. To allow you to quickly use the TABLE, we have checked and part-charged the TABLE and pre-configured the remote control. Please fully charge the unit before initial usage (about 6 hours). After charging, please switch on the main round button below the table.

In the following, we would like to present you the main functions of your FRIZ Light, as well as tips for the safe usage.

Pre-set remote controls (Up-Light and Down-Light)

Your TABLE has been shipped with two remote controls. One controls the TOP light and one controls the DOWN light. The respective remotes are marked on the cover. The remotes have been pre-set with two main group numbers (see sticker under table - TABLE **UP 77** and TABLE **DOWN 88**) and the four memory buttons **M1** to **M4**.

ON		Switching on TABLE
OFF		Switching off TABLE
M1	RAINBOW	Lights of the same main group change colors successively
M2	CANDLE	Imitation of candle light
M3 Up	WAVE	Synchronous color change within main group of lights
M4 Up	COLOR	Single color; Changed by pressing < or >; Press the M4 button for 3 seconds to store new color.
M3 Down	COLOR	(See above) Orange is preset
M4 Down	WHITE	White color temperature can be changed by pressing < or > Press the M4 button for 3 seconds to store new color.

Secure Charging

Please use the corresponding charger.

Attention: Usage of a wrong charger can damage the product and/or cause fire.

Additional information

For additional information, please visit our website: www.frizlights.com/support/

And now – Enjoy your FRIZ TABLE